


Digital High Pressure Heat Press Manual


Model NO.: SHP-15/20/24LP2

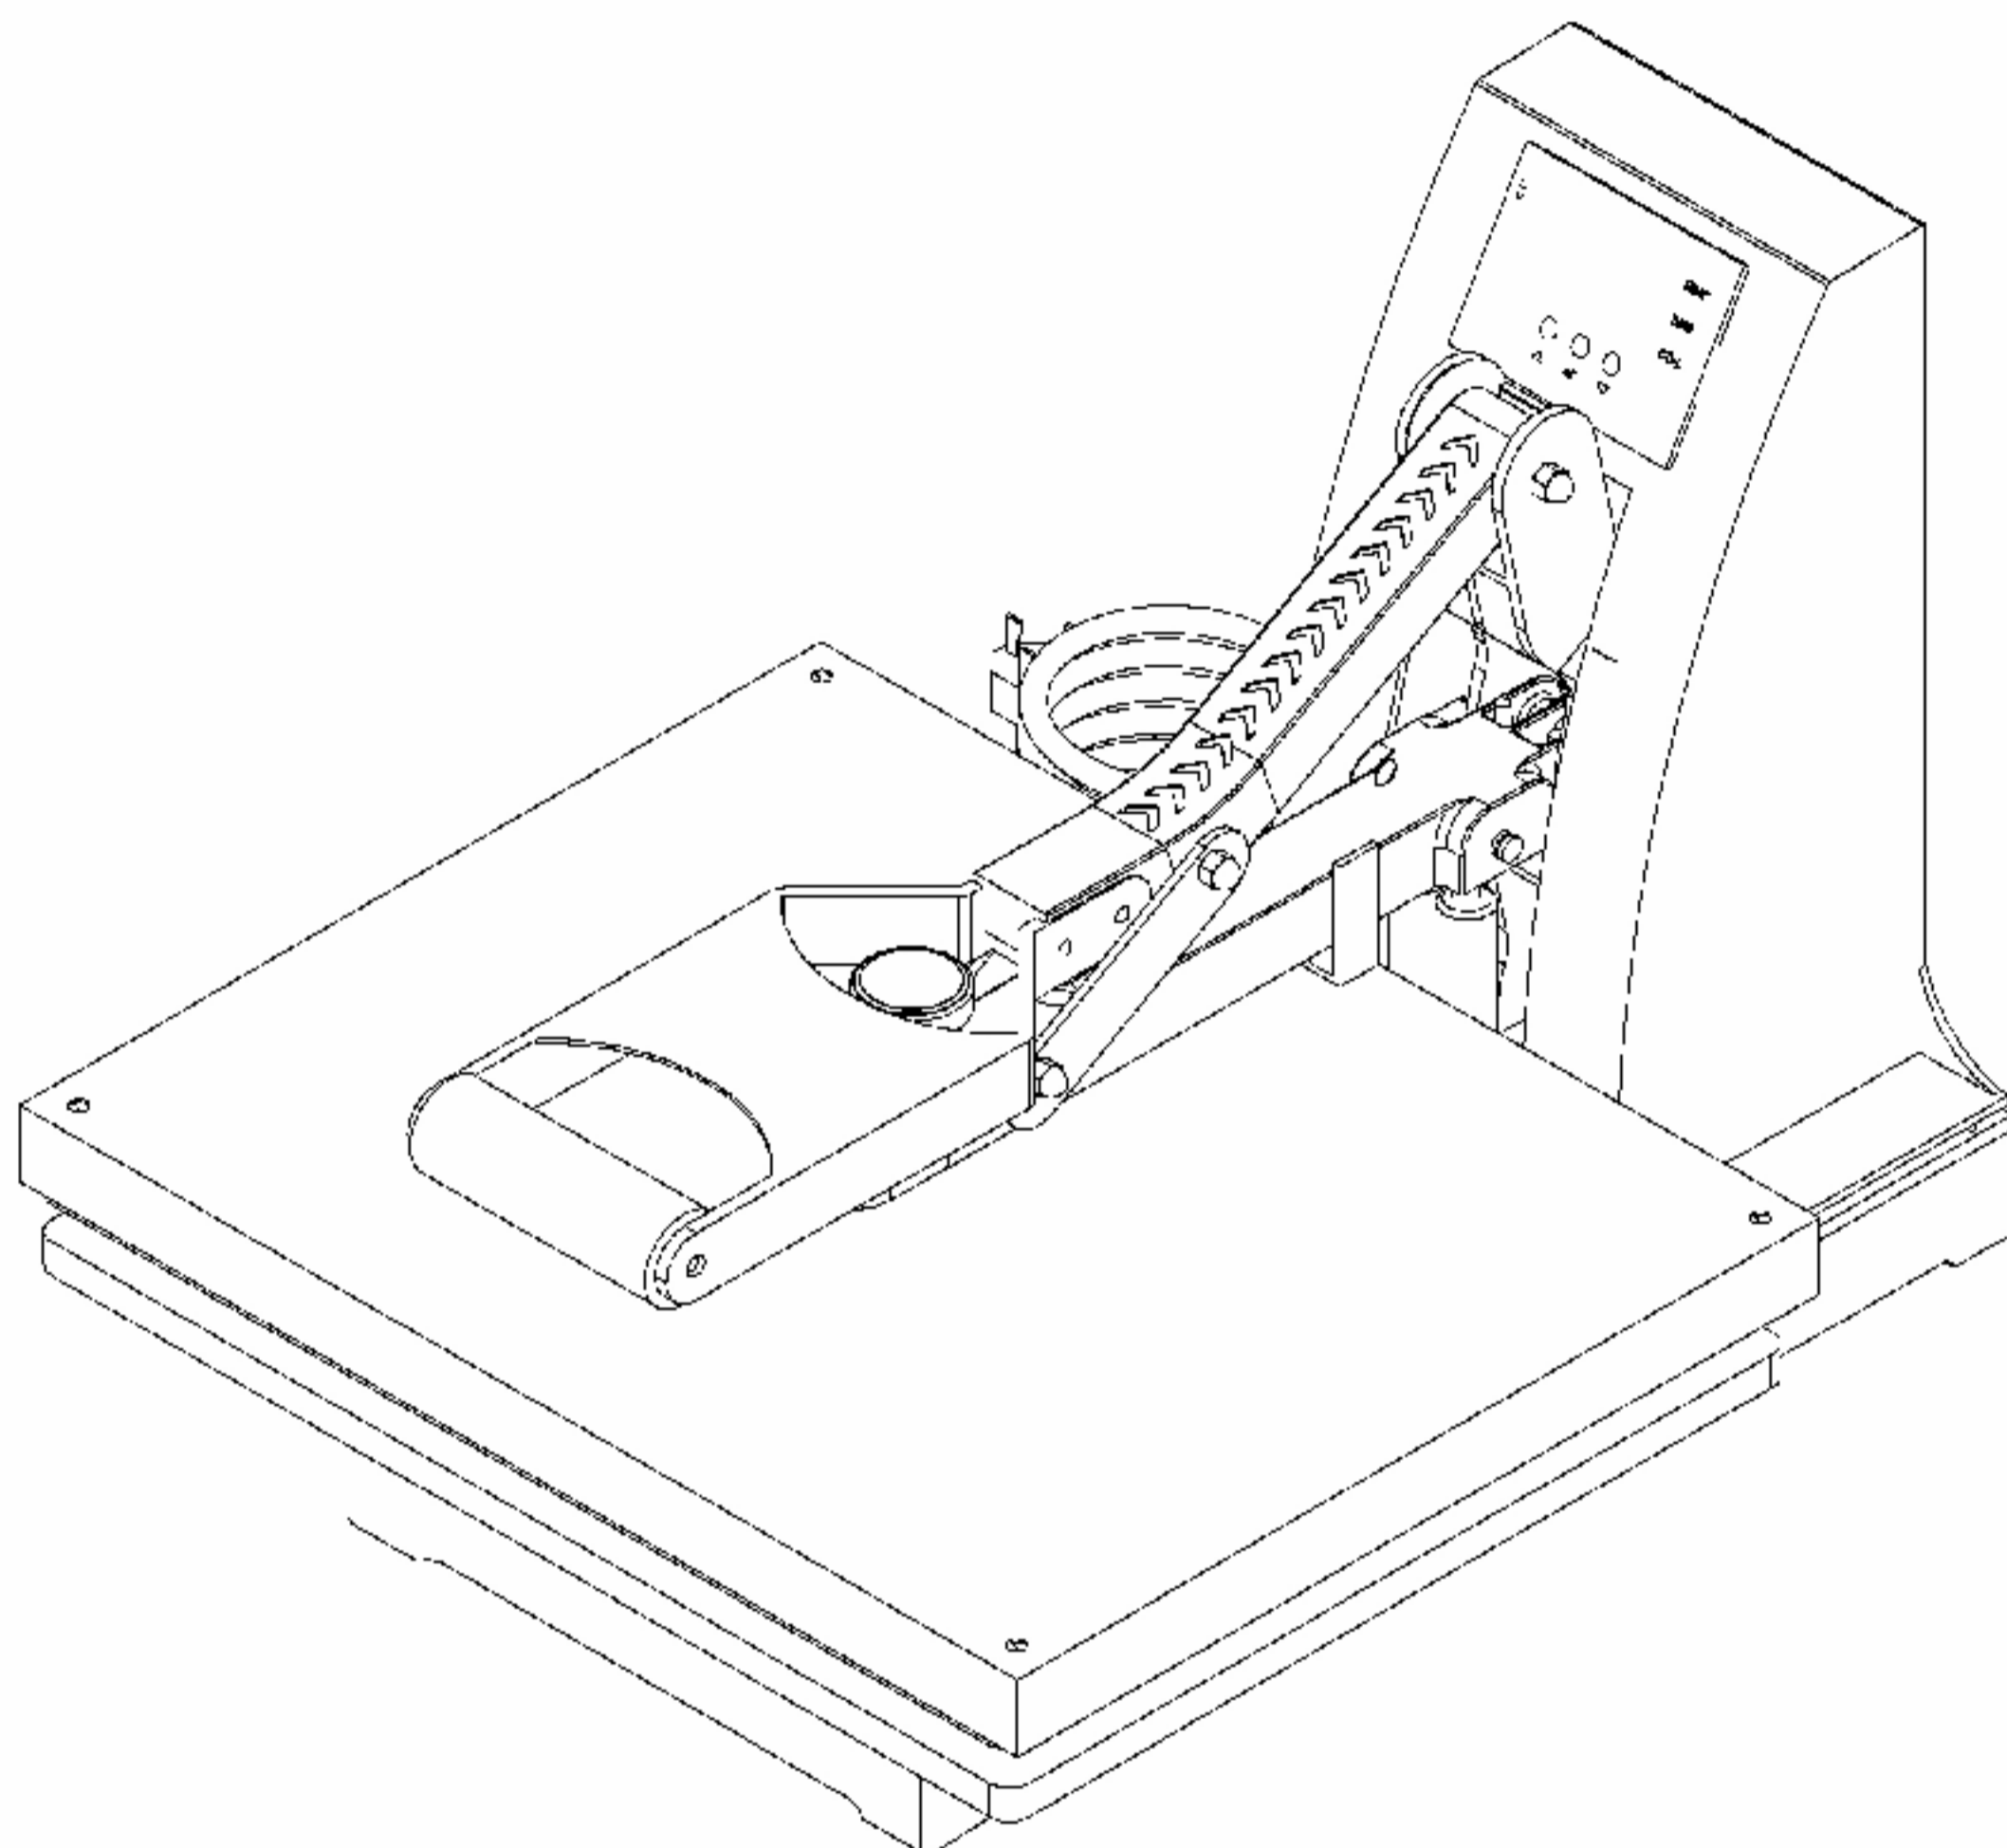

CONTENTS

I. Assembly Drawing	-----	2
II. Technical Parameters	-----	2
III. Operation Process	-----	3-4
V. Maintenance	-----	5
IV. Trouble Shooting For Transfer Print Quality	-----	5
VI. Circuit Diagram	-----	6

I. Assembly Drawing

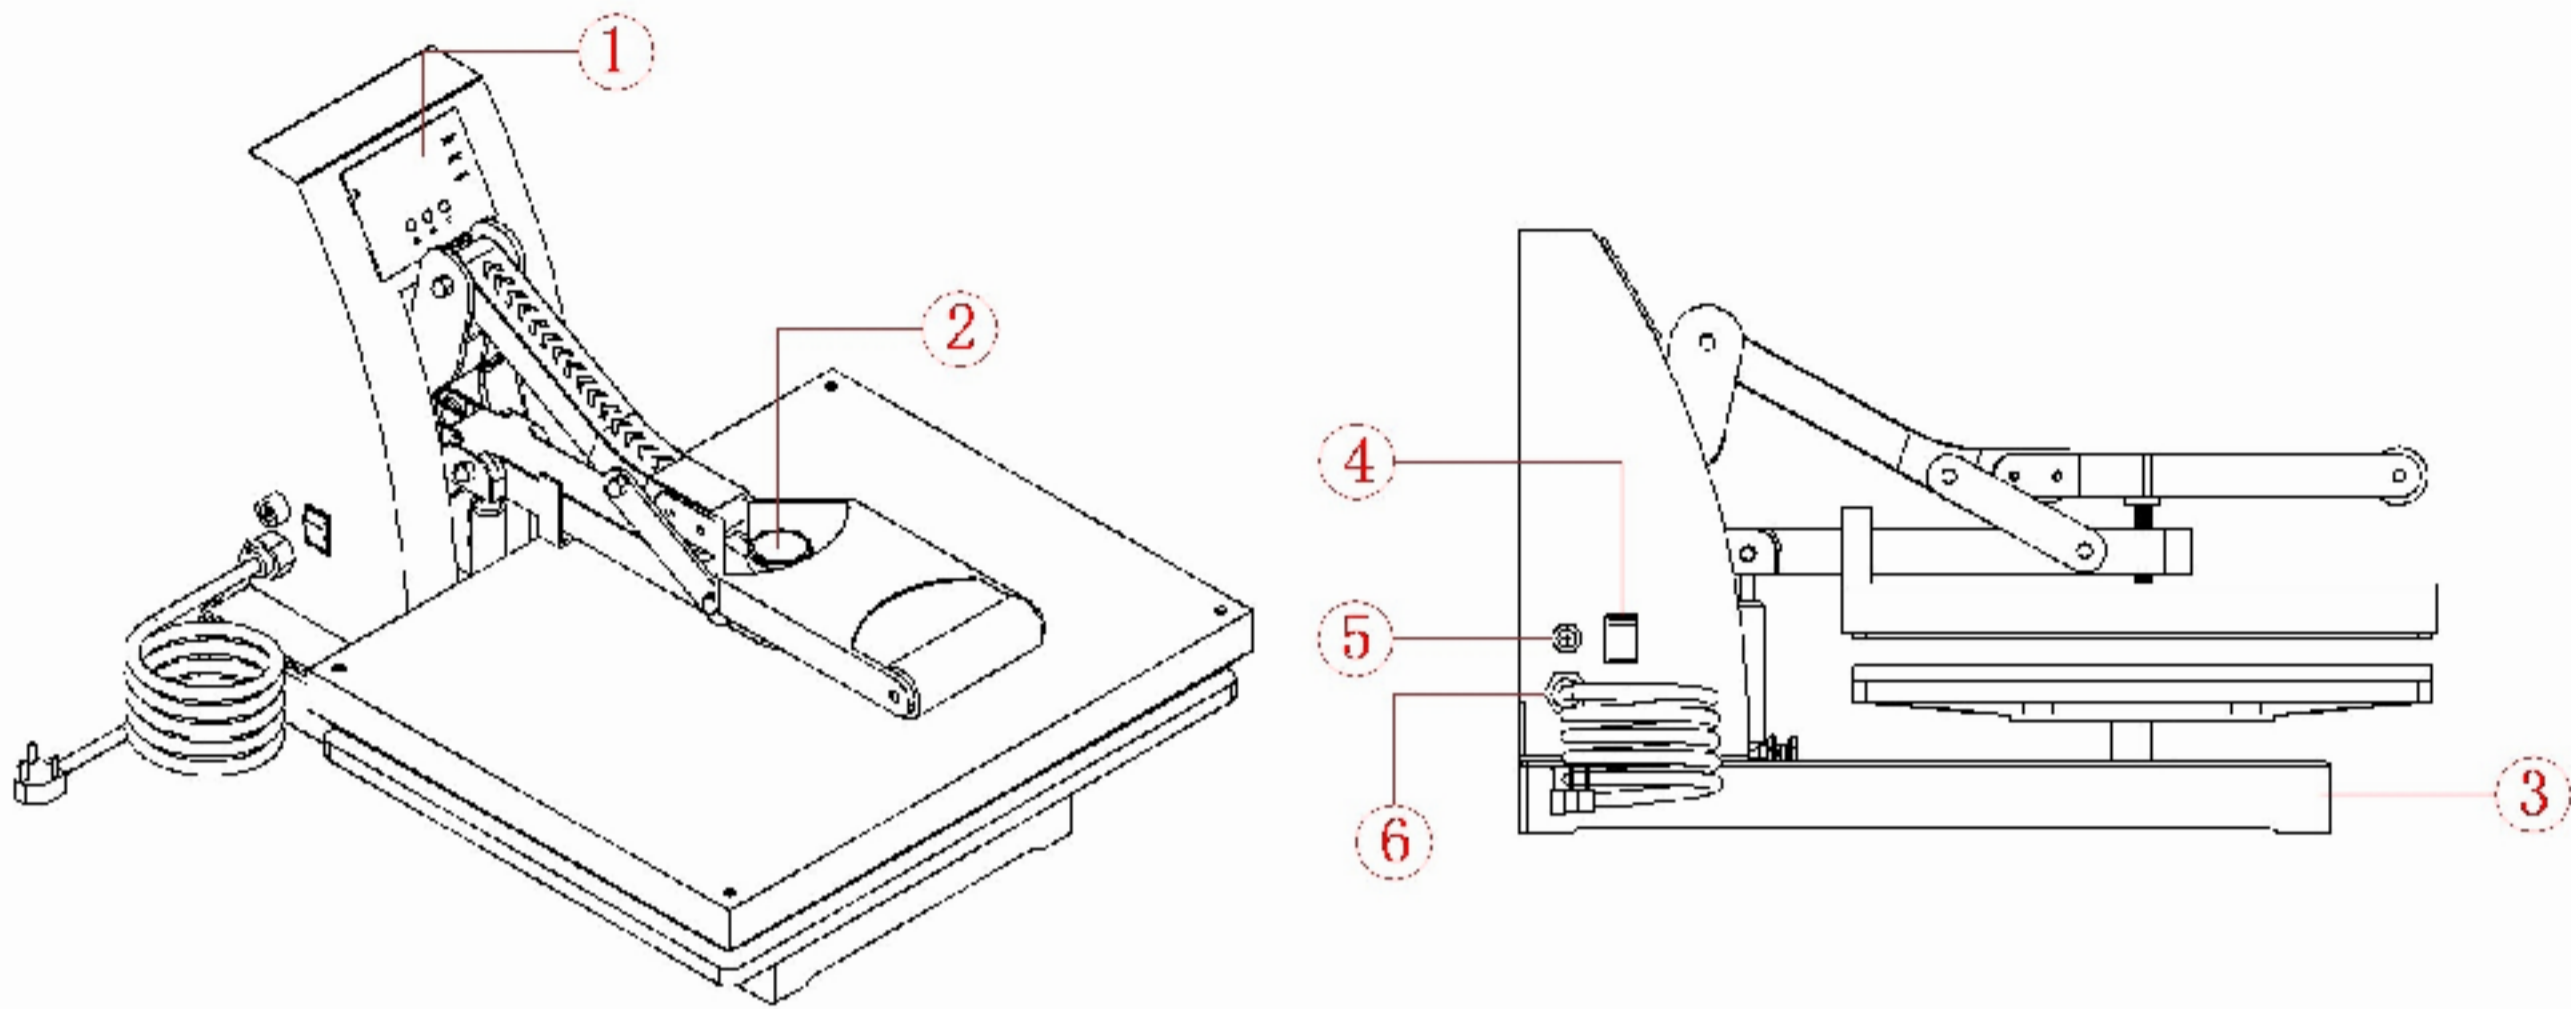









- ①GY-04 Digital Controller ②Pressure Adjust Knob ③ Machine base ④Power Switch
⑤Fuse ⑥Power Cord

II. Technical Parameters







1. Model No.: SHP-15/20/24LP2
2. Machine Dimension: 415*676*620mm
3. Heat Platen Size: 38 x 38cm,40x50cm,40x60cm
4. Printable Articles Max Size: 400*600*20mm
5. Voltage: 220V/1Phase; 110V/1Phase
6. Power: 220V/1.8KW; 110V/1.2KW
7. Recommend Setting: 30~280s; 180~200°C
Time Range: 0~999s
Maximum Temp: 225 C°
8. Packing Size: 71*50*53cm/75*60*52cm/77*72*58cm
9. Gross Weight: 24kg/34kg/39kg

III. Operating Process

1. Set temperature required

		
<p>Turn on power switch, temperature light is ON. The digital display shows </p>	<p>Press  button, the  light is on (C denotes Celsius). Press arrows “△” or “▽” to select “°C” or “°F” (F denotes Fahrenheit) according to your habits.</p>	<p>Press  button, the temp  light is on. Select with arrows the temperature according to different transfer material (Normally 180°C~200°C)</p>

2. Set time required

		
<p>Press  button after temperature setting and the  time light is on. Select with arrows the time according to different transfer material.</p>	<p>Press  button after time setting; the display shows the temperature starts to rise. “CD-L” shows the time counting down during your transfer.</p>	<p>If there is a difference between the actual temperature and temperature shows on the controller, you can use P5 mode to calibrate the difference. For example, when actual heat platen temperature is 180 ° C but the display shows 200 ° C, press button for 5 seconds to enter the P5 mode. When enter P5 mode, press UP button “△” to set to- 20, and then press button again for 5 seconds return to operation mode. In the contrast, when actual heat platen temperature is 200 ° C but the display shows 180 ° C, press Down button “▽” to set to20, and then press button 5 seconds return to operation mode</p>

3. Printing methods

Step 1: Make sure the cord is connected well to the wall socket. Place the object (i.e. T-shirt) on press bed, and transfer paper with images facing down the object, adjust pressure to your requirement, and turn on the power.

Step 2: Set the temperature and time required, and the temperature starts to rise.

Step 3: When the temperature rise to the setting temperature, the buzzer sends out sounds; then close down heat platen (meantime the sounds stop) and starts to transfer.

Step 4: Then the time counter is on, once time is up, open up the upper heat platen.

Step 5: Consult the Transfer Paper instructions on whether to peel cold or hot, Here are suggested Pressing time guidelines for different transfer paper.

Ink-Jet Transfer Paper (fabric) 14-18 seconds

Laser Copier/Printer Transfer Paper (fabric) 18-25 seconds

Sublimation Transfers (onto Fabrics) 25-30 seconds

Sublimation Transfers (onto FR-Plastic/Woods) 60-70 seconds

4. Recommendations:

1) Ceramic tile transfer: (Mugs & Plates transfer is similar)

Set temperature: 180°C.

Set time: 15 seconds

2) T-shirt transfer:

Set temperature: 180°C.

Set time: (chemical fiber use for sublimation transfer paper: 30-50 seconds; pure cotton use for T-shirt transfer paper: 10-20 seconds)

3). Aluminum sheet transfer:

Set temperature: 180°C

Set Time: 45 seconds

NOTE:

1) Please switch off the machine and unplug the power cord when the machine is not in use.

2) The heat platen will cool down to the room temperature, if heat press stays unused for more than 30 minutes.

3) For better maintenance of heat press, the maximum setting temperature is 210 degrees C (410 degrees F).

4) To avoid re-heating the first transfer when printing double sided T-Shirts, insert a sheet of cardboard in between

the shirt, adjust the height to less pressure, then press.

5) Heat platen may pivot slightly back and forth rotationally. This is due to movement allowance within the assembled clamp, and is normal.

V. Maintenance

1. No action after turn on the machine

- 1). Check the plug whether it connects well or whether it is broken.
- 2). Check the power switch or digital controller whether it is broken.
- 3). Check the fuse whether it has been burnt out.
- 4). Indicating light is on, but no display on screen, check the 5 cable of Railway transformer. If it's loosening, showing the problem is poor connection. If they connects well, showing that the Transformer is faulty.

2. The display screen are working well, but no temperature increasing on the heat platen.

- 1). Check whether the thermocouple of the heat platen touches well. If the thermocouple is loose, the display will show 255 and machine keeps beeping.
- 2). Check if the indicating light of solid-state relay is on, if not, check if the relay or digital controller is broken.
- 3). If you already changed the new solid-state relay but the heat platen still can't heating up, check if the heat platen is faulty or the heat platen's power cable is loose, need to change by new heat platen.

3. The heat platen works well, but suddenly the display screen show 255°C.

- 1). Check whether the thermocouple of the heat platen touches well.
- 2). If the thermocouple touches well but still shows 255°C, then it is faulty.

4. The machine is heating during 0~180°C, but display number jumps to above 200°C or 300°C suddenly, or the numbers on display jumps irregularly.

- 1). Check whether the thermocouple of the heat platen touches well.
- 2). If the thermocouple is good, It shows that the program of digital controller is broken, which namely IC or is broken, need to change by new controller.

5. The temperature is out of control: Set 180°C, but the actual temperature is above 200°C。

- 1). It means the solid-state relay is broken, out of control, need to change the relay.
- 2). Or the digital controller is faulty and it keeps conveying electric to relay, need to change controller.

6. The setting temp and time becomes abnormal after exchange the heat platen

- 1). Please reset the temp and time according the operation process manual.


7. Other notice

- 1). In order to prolong the machine service life, please add the lubrication oil regularly on the joints.
- 2). In order to keep the heat platen's good transfer effect, you need to protect the heat platen carefully whenever you are using it or not.
- 3). Please keep the machine in dry place.
- 4). If you are not able to solve the electrical parts problem, please kindly contact the supplier and get technical support.

IV. Trouble shooting for transfer print quality

1. If the print color is pale: the temperature is too low / the pressure is not correct / or not pressed long enough.
2. If the print color is too brown or the transfer paper is almost burnt: reduce the setting temperature
2. If the print is blurring: too much transfer time causes proliferation.
3. If print color is different/partial transfer effect is not good enough: the pressure is not enough / or not pressed long enough / or poor quality transfer paper.
4. If transfer paper stick to the object after transfer: the temperature is too high/ or poor quality printing ink.

VI. Circuit Diagram

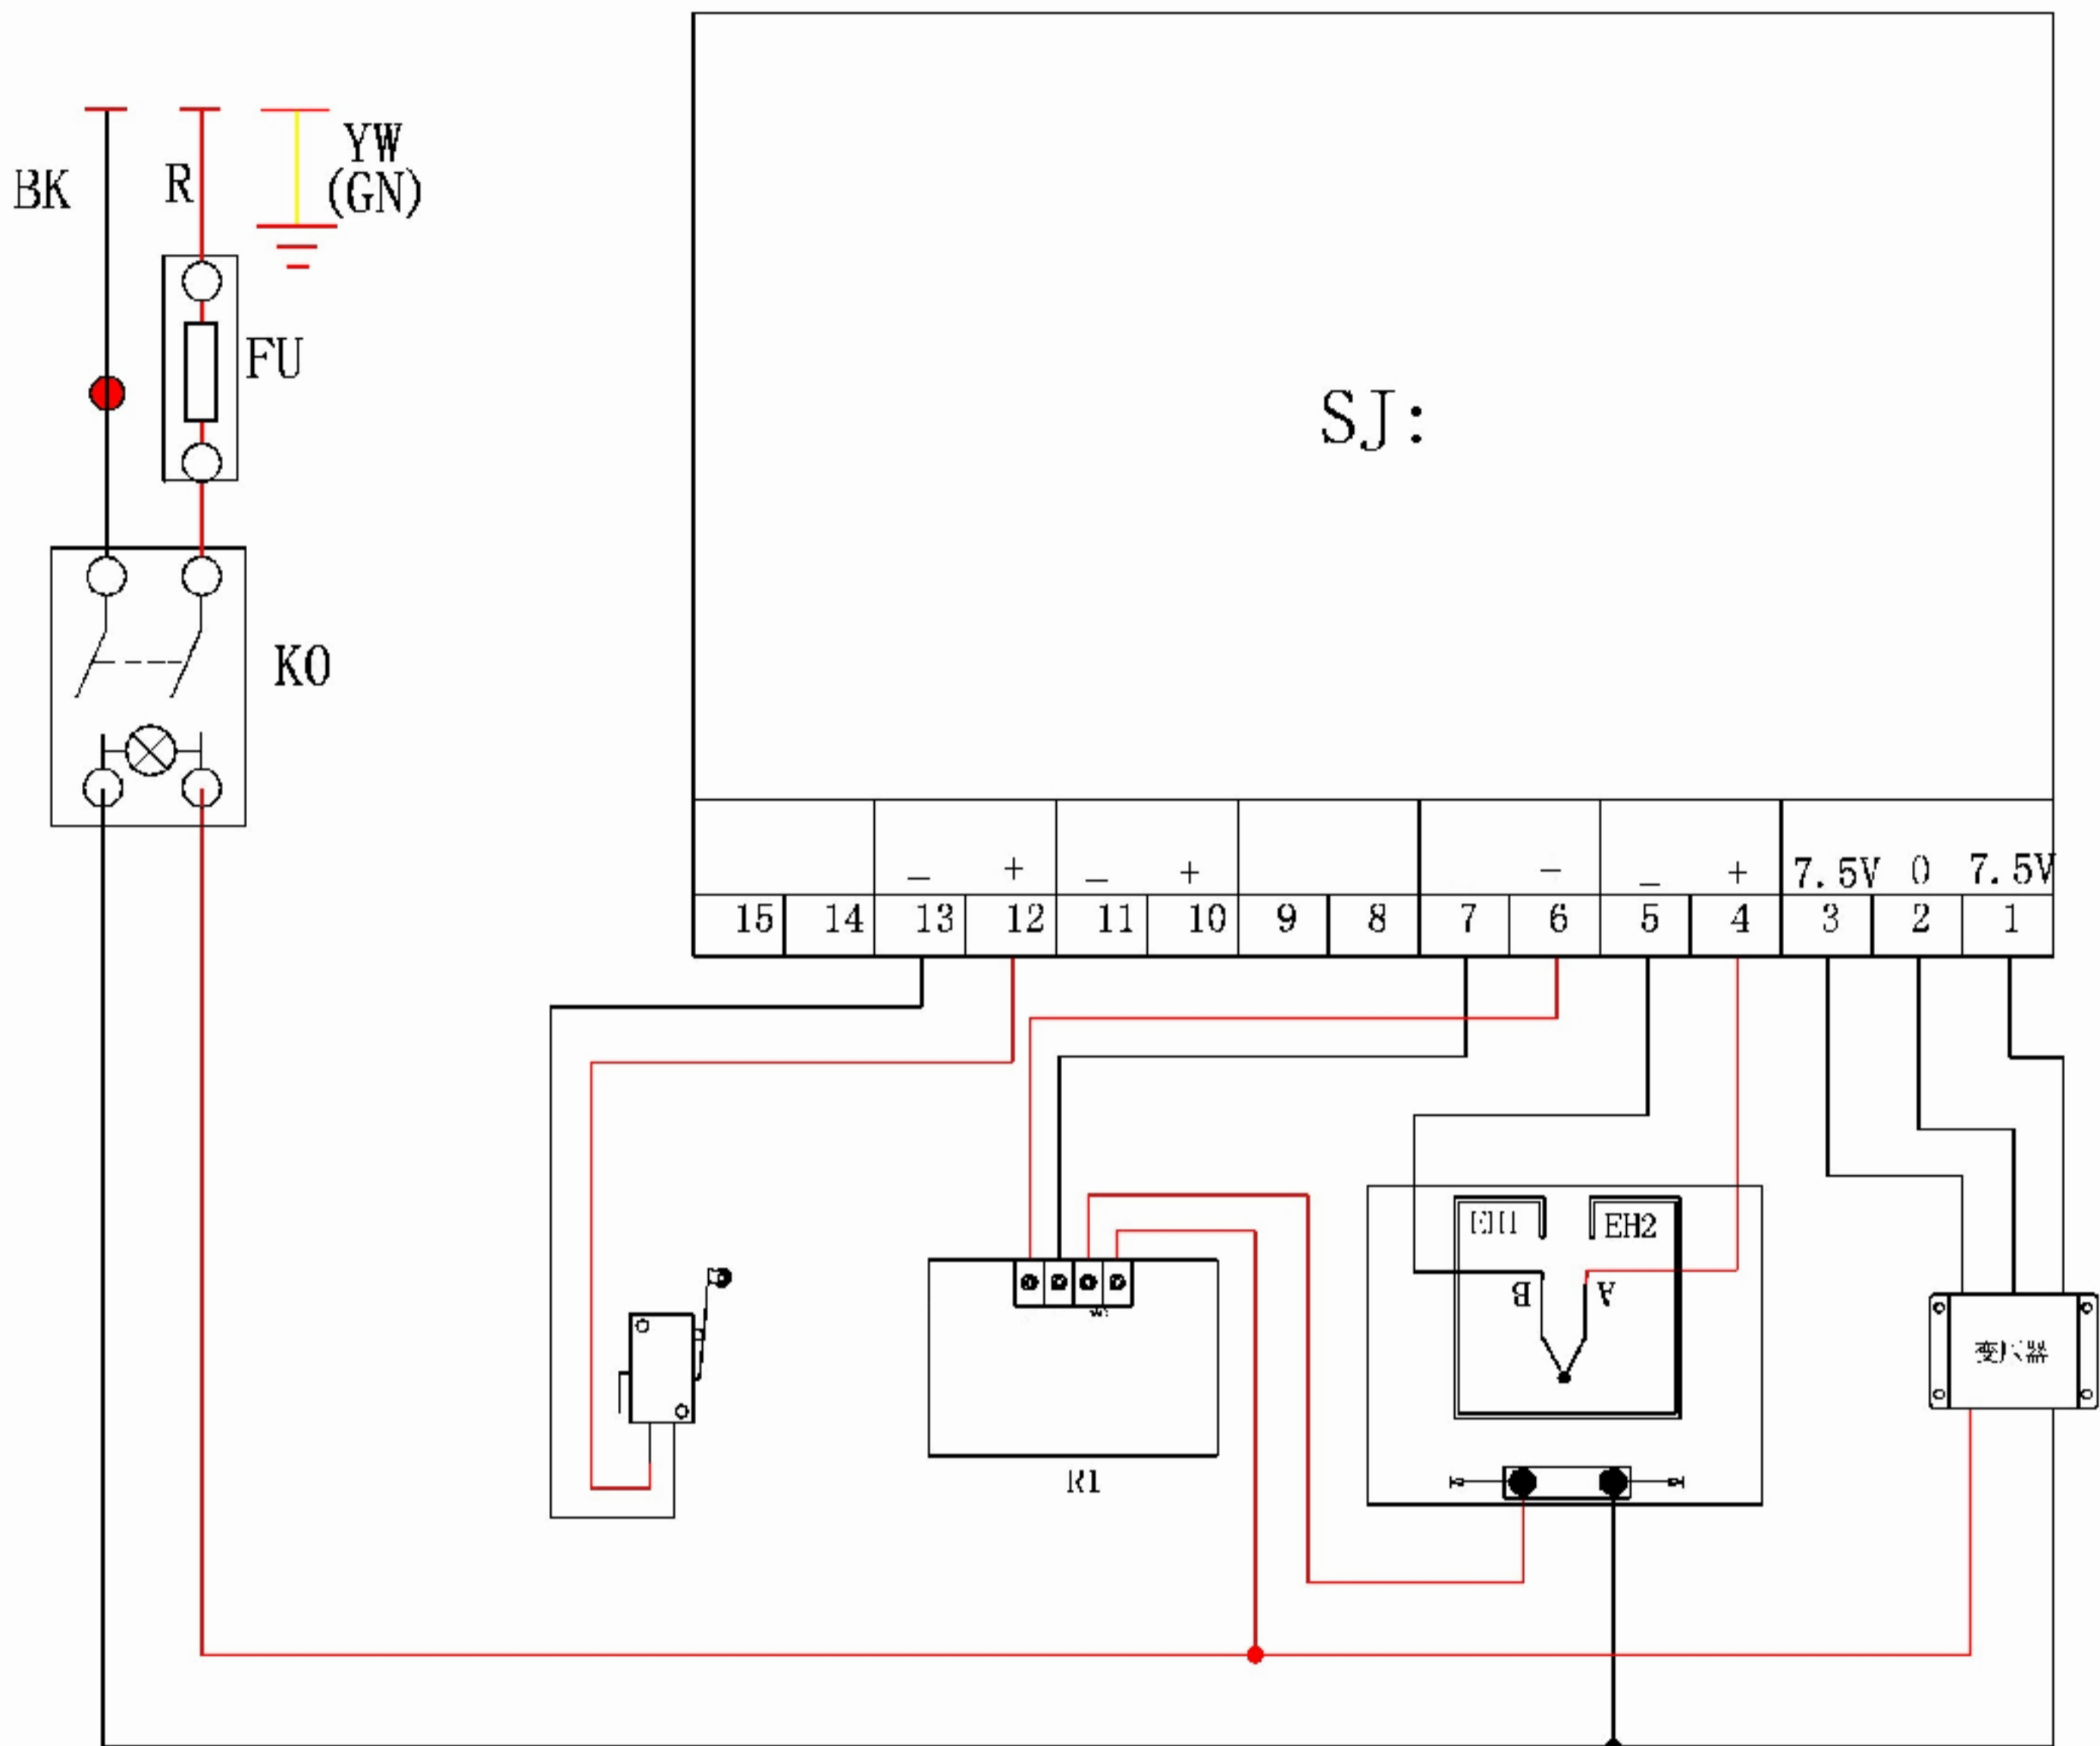


KO: Power Switch
 EH1 EH2: Heating Pipe
 T: Transformer

K2: Limit Switch
 SJ: Thermostat
 R1: Relay

FU: Fuse(16A/25V)

VII. Explosion View

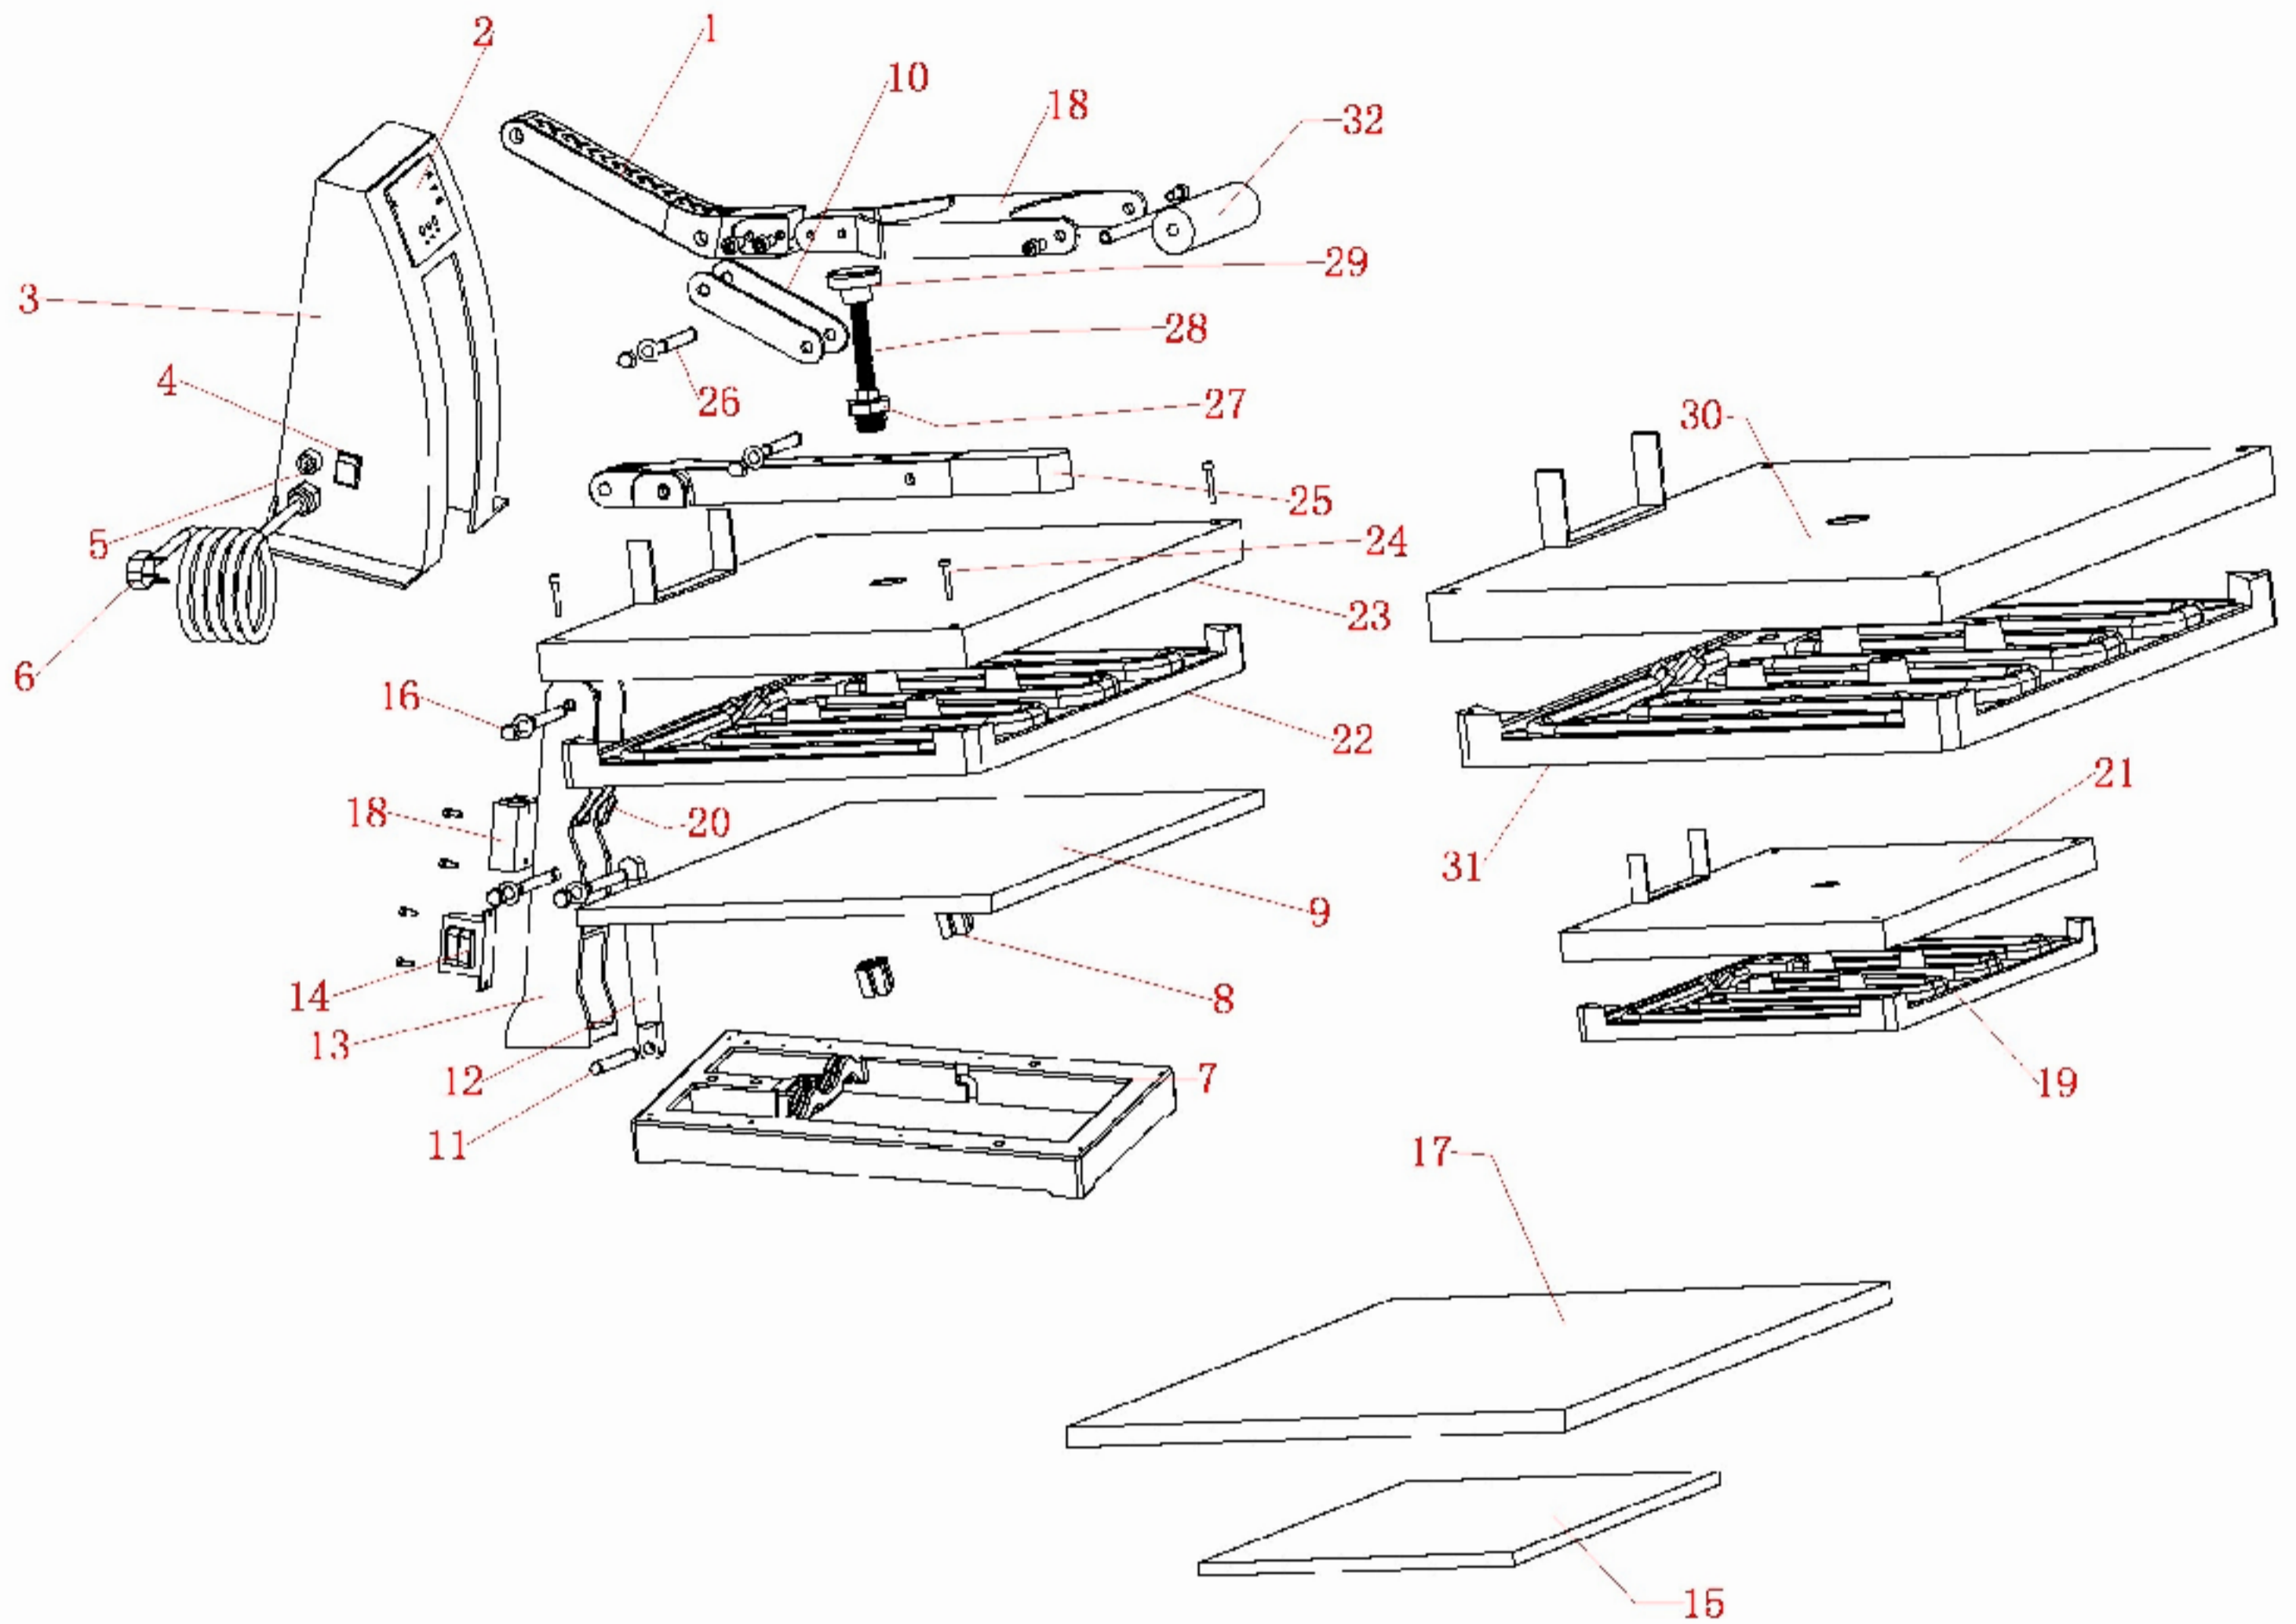

Serial No.	Part Name	Qty
1	Handle Arm	1
2	GY-04 Digital Controller	1
3	Electronic Control box	1
4	Power Switch	1
5	Fuse Holder	1
6	Power Cord	1
7	Machine Base	1
8	Under Plate foot	2
9	Under Plate	1
10	Connector	1
11	Handle fixed shaft	1
12	Gas Spring	1
13	Pillar	1
14	Transformer	1
15	Bottom Plate	1
16	Half Round Nut	10

17	Under Plate	1
18	Relay	1
19	Heat Platen	1
20	Limit Switch	1
21	Heat Platen Cover	1
22	Heat Platen	1
23	Heat Platen Cover	1
24	Flat Cross-screw	4
25	Davit Arm	1
26	Handle Shaft	3
27	Pressure adjust Nut	
28	Pressure adjust Screw	1
29	Five Star Even Wheel	1
30	Heat Platen Cover	1
31	Heat Platen	1
32	EVA Handle Bar Grip	1